



**FA-2 PSR PRINT Rinse Start Up Kit**

For Processing Fujicolor CA Papers and Equivalent Papers Through Process RA-2SM

**Catalog Number: 815307 (4 x 16L)**

**DESCRIPTION**

This product is designed for mixing fresh PSR print rinse working tank solution for all Noritsu RA-2SM minilab processors' STB tanks.

**SAFE HANDLING INSTRUCTIONS**

Please refer to Material Safety Data Sheets (MSDS) for specific chemical details. For emergencies, please contact CHEMTREC at 1-800-424-9300. You can obtain an MSDS by calling the Fuji Hunt Technical Hotline at 1-800-526-0851 Ext. 10.

**HMIS INFORMATION**

Hazardous Materials Identification System. Please refer to Section 3 in the MSDS for further information.

	Concentrate	Working Tank
Health	2	1
Flammability	0	0
Reactivity	0	0
Personal Protection	C	C

**SPECS & RECOMMENDATIONS**

Temperature	35 - 41° C 95 - 106° F
Processing Time	1'30"
Starting Replenishment Rate (mL/m <sup>2</sup> )	194 mL/m <sup>2</sup> 18.0 mL/ft <sup>2</sup>

Refer to bulletin FA-2 Print for additional specifications and replenishment pump setting recommendations.


**SPECIFIC GRAVITY & pH**

	pH @ 25° C	SpG @ 20° C	SpG @ 38° C
Replenisher Tank	Concentrate – Specifications Not Published		
Fresh Tank	7.50 ± 1.50	1.000 ± 0.005	0.996 ± 0.005


**MIXING INSTRUCTIONS**

**PSR (STB) Fresh Rinse Working Tank**

**1 Liter**

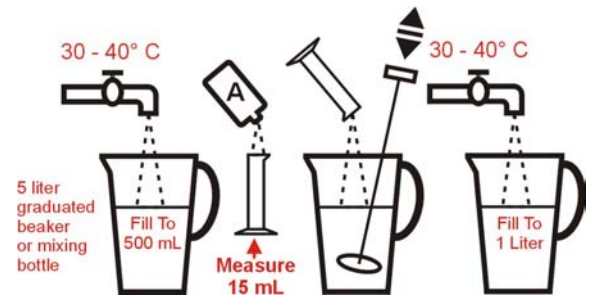

**5 Liter**

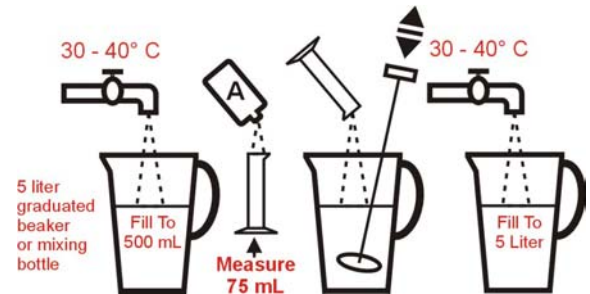

**To Fill Processor Rinse Working Tank . . .**

- Mix fresh PSR print rinse using above instructions.

**NOTE:** Repeat steps 2 through 5 for each STB tank (4 tanks total)

- Remove the STB filter from the STB filter housing.
- Pour mixed print rinse tank solution into the STB circulation filter port.
- Fill to the designated fill line in tank.
- Reinstall the STB filter.
- Remaining solution should be disposed of properly.

**SHELF LIFE**

	Concentrate	Working Tank
Time	U = 24 Months O = 2 Weeks	2 Week
Color	Clear Slight green tint	Clear, Colorless
Odor	No Odor	No Odor

U = Unopened, O = Opened

The data contained in this photographic bulletin is believed to be true and accurate, but is offered solely for your consideration, investigation, and verification. Nothing herein shall be construed to be a warranty or guarantee by either FUJI HUNT Photographic Chemicals, Inc. (FUJI HUNT) or any of its affiliates, and all such warranties, implied or otherwise, including any implied warranty of merchantability, are hereby expressly disclaimed. You, of course, are fully responsible for any use and / or domestic or foreign sale of the product(s) described, and nothing in this photographic bulletin shall be construed to constitute permission or a recommendation to practice any invention covered by patent or patent application or know-how owned by FUJI HUNT, its affiliates, or others.

**Bulletin Number: TB 815307**  
*Effective: February 2004*  
*Replaces Bulletin Dated: May 2003*

Fuji Hunt Photographic Chemicals, Inc.  
40 Boroline Road  
Allendale, New Jersey 07401



***Technical Hotline***  
***1-800-526-0851 Ext. 10***